


SHIFT-I INSTALLATION – MY01/02 WRX

By stebaun

1. Use Phillips screwdriver to take off all the screws on the plastic cover under the steering column.
2. Take off the steering column at this stage if you want to run the wires through the switch on top of the steering column, otherwise you can leave it on and run the wires straight down though this will look messy.
3. Splice the green wire (shown in the blurry picture below) and solder the black/red wire that runs from the shift-I (ignition wire).

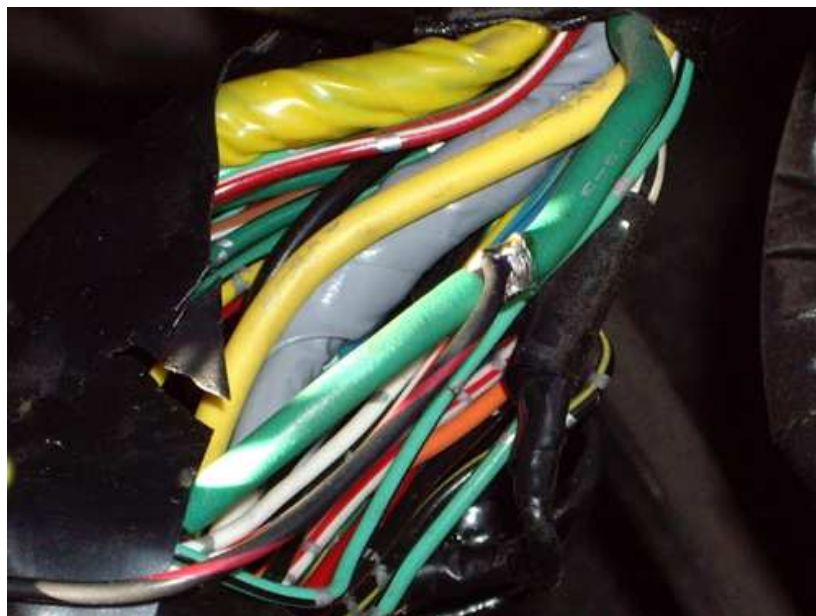

4. Splice and solder the black/blue wire running from the shift-I onto the orange/white wire that comes from the white rectangle connector to the left of the steering column (tacho wire).
5. Wrap the black wire running from the shift-i to the screw located above the ignition barrel (this is the earth wire so you can use any other location)
6. Put everything back on and use double sided tape to stick the shift-i on.



7. Finito.